



1852684

Adderley Armoire-AM

Parts List

A.	Top Panel of Base	1 pc
B.	Left Side Assembly of Base	1 pc
C.	Right Side Assembly of Base	1 pc
D.	Front Top Stretcher of Base	1 pc
E.	Front Lower Stretcher of Base	1 pc
F.	Back Panel of Base	1 pc
G.	Bottom Panel of Base	1 pc
H.	Front Feet	2 pcs
I.	Back Feet	2 pcs
J.	Front Panels of Drawers	2 pcs
K.	Left Side Assembly of Drawers	2 pcs
L.	Right Side Assembly of Drawers	2 pcs
M.	Back Panels of Drawers	2 pcs
N.	Bottom Panels of Drawers	2 pcs
O.	Crown of Hutch	1 pc
P.	Top Assembly of Hutch	1 pc
Q.	Left Side Panel of Hutch	1 pc
R.	Right Side Panel of Hutch	1 pc
S.	Stationary Shelf of Hutch	1 pc
T.	Back Panel of Hutch	1 pc
U.	Left Door	1 pc
V.	Right Door	1 pc
W.	Large Handles	2 pcs
X.	Small Handles	2 pcs
Y.	Confirmat Screws	4 pcs
Z.	Long Allen Head Bolts	2 pcs
ZA.	Short Allen Head Bolts	12 pcs
ZB.	Large Flat Washers	2 pcs



1852684

Adderley Armoire-AM

ZC.	Large Lock Washers	2 pcs
ZD.	Small Flat Washers	12 pcs
ZE.	Small Lock Washers	12 pcs
ZF.	Connecting Bolts	12 pcs
ZG.	Eccentric Cams	12 pcs
ZH.	Plastic Covers	12 pcs
ZI.	Phillips Head Bolts	6 pcs
ZJ.	Long Flat Phillips Head Screws	2 pcs
ZK.	Medium Flat Phillips Head Screws	32 pcs
ZL.	Short Flat Phillips Head Screws	12 pcs
ZM.	Pan Phillips Head Screws	34 pcs
ZN.	Phillips Head Screwdriver	1 pc
ZO.	Flat Head Screwdriver	1 pc
ZP.	Large Allen Head Wrench	1 pc
ZQ.	Small Allen Head Wrench	1 pc

- * Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- * Use the hardware illustrations to determine correct piece and size.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.


Note: Once the Armoire is assembled it should be lifted in order to move it. Do not drag as this will result in damage to the item.




1852684

Adderley Armoire-AM


Hardware Illustrations




Y. Confirmat Screw

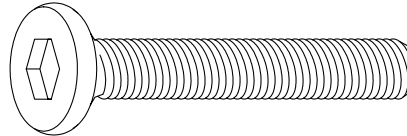


Z. Long Allen Head Bolt




ZA. Short Allen Head Bolt



ZB. Large Flat Washer




ZC. Large Lock Washer




ZD. Small Flat Washer




ZE. Small Lock Washer




ZF. Connecting Bolt

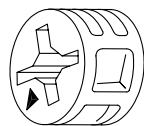

ZG. Eccentric Cam

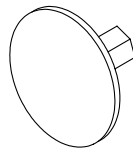

ZH. Plastic Cover



ZI. Phillips Head Bolt



ZJ. Long Flat Phillips Head Screw



ZK. Medium Flat Phillips Head Screw



ZL. Short Flat Phillips Head Screw



ZM. Pan Flat Phillips Head Screw



1852684

Adderley Armoire-AM

Attach Feet

Parts required

G.	Bottom Panel of Base	1 pc	ZC.	Large Lock Washers	2 pcs
H.	Front Feet	2 pcs	ZD.	Small Flat Washers	4 pcs
I.	Back Feet	2 pcs	ZE.	Small Lock Washers	4 pcs
Z.	Long Allen Head Bolts	2 pcs	ZP.	Large Allen Head Wrench	1 pc
ZA.	Short Allen Head Bolts	4 pcs	ZQ.	Small Allen Head Wrench	1 pc
ZB.	Large Flat Washers	2 pcs			

1. **Attach Front Feet (H)** Align the pre-drilled holes in the Front Feet (H) with the pre-drilled holes in the front corners of Bottom Panel of Base (G). Be sure that the dowels of the Front Feet (H) align with the pre-drilled holes in the Bottom Panel of Base (G). Secure with Short Allen Head Bolts (ZA), Small Lock Washers (ZE) and Small Flat Washers (ZD) using Small Allen Head Wrench (ZQ). See illustration #1.
2. **Attach Back Feet (I)** Align the pre-drilled holes in the Back Feet (I) with the pre-drilled holes in the back corners of Bottom Panel of Base (G). Be sure that the dowels of Back Feet (I) align with the pre-drilled holes in the Bottom Panel of Base (G). Secure with Long Allen Head Bolts (Z), Large Lock Washers (ZC) and Large Flat Washers (ZB) using Large Allen Head Wrench (ZP). See illustration #1.

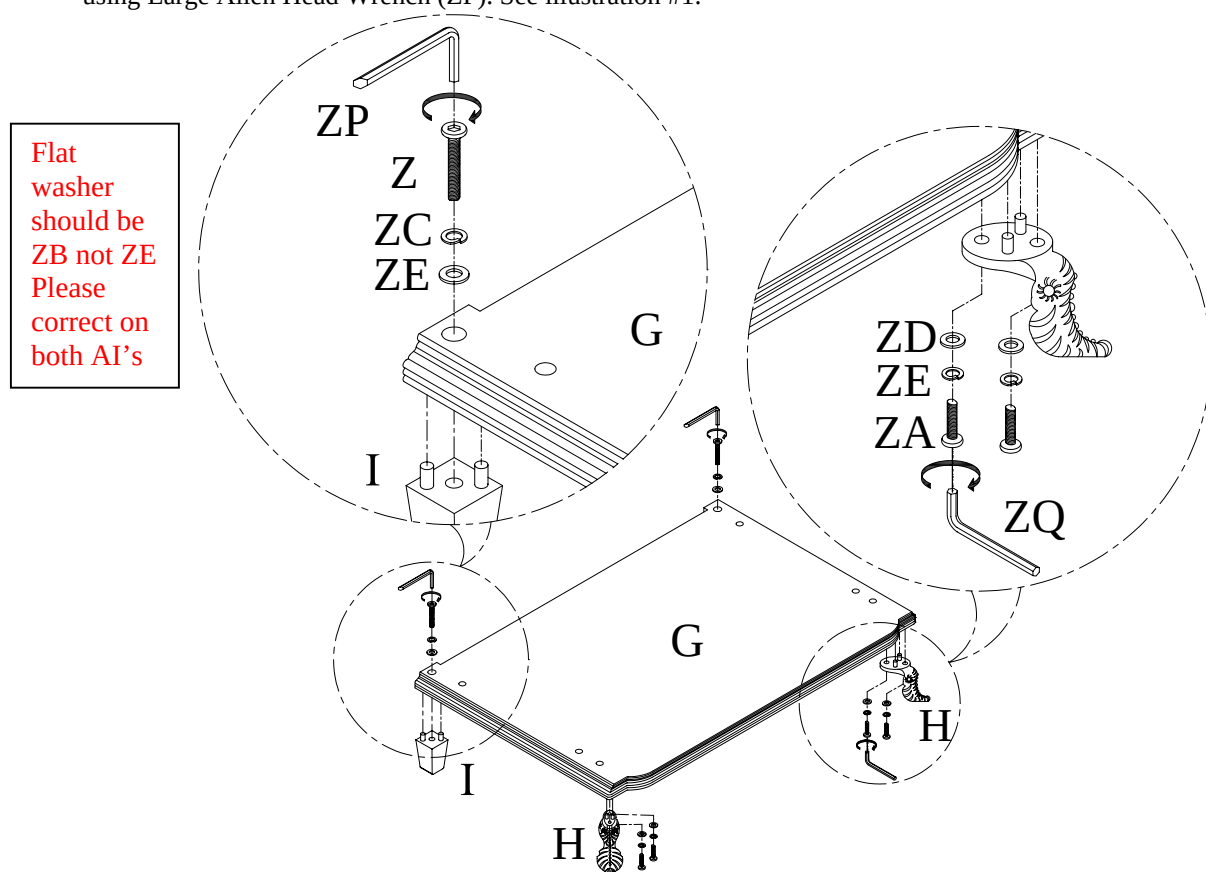


Illustration # 1



1852684

Adderley Armoire-AM

Attach Top Panel, Left & Right Side Assembly of Base

Parts required

B.	Left Side Assembly of Base	1 pc	ZF.	Connecting Bolts	4 pcs
C.	Right Side Assembly of Base	1 pc	ZG.	Eccentric Cams	4 pcs
D.	Front Top Stretcher of Base	1 pc	ZH.	Plastic Covers	4 pcs
E.	Front Lower Stretcher of Base	1 pc	ZN.	Phillips Head Screwdriver	1 pc
G.	Bottom Panel of Base	1 pc	ZJ.	Long Flat Phillips Head Screws	2 pcs
Y.	Confirmat Screws	4 pcs	ZQ.	Small Allen Head Wrench	1 pc

3. **Attach Left Side Assembly of Base (B)** Align the pre-drilled holes in the Left Side Assembly of Base (B) with the pre-drilled holes in the Bottom Panel of Base (G). Make sure the dowels of the Left Side Assembly of Base (B) align with the pre-drilled holes in the the Bottom Panel of Base (G). Secure with Confirmat Screws (Y) using Small Allen Head Wrench (ZQ). See illustration #2.
4. **Attach Right Side Assembly of Base (C)** Insert the dowels of Front Top & Lower Stretcher of Base (D&E) into the pre-drilled holes in the Left & Right Side Assembly of Base (B). Be sure the pre-drilled holes of Front Top Stretcher of Base (D) face down. Repeat Step 3 to attach Right Side Assembly of Base (C) to Bottom Panel of Base (G). Insert Long Flat Phillips Head Screws (ZJ) through the pre-drilled holes in Front Top Stretcher of Base (D) into the pre-drilled holes in the Left & Right Side Assembly of Base (B, C). Secure with Phillips Head Screwdriver (ZN).
5. **Attach Connecting Bolts (ZF)** Align the exposed threads on the Connecting Bolts (ZF) with the pre-threaded holes in the Top Panel of Base (A). Tighten by turning in a clockwise direction using the Flat Head Screwdriver (ZO).
6. **Attach Top Panel of Base (A)** Align the Connecting Bolts (ZF) with the pre-drilled holes in the ends of Left & Right Side Assembly of Base (B, C). Be sure that the dowels on the ends of Left & Right Side Assembly of Base (B, C) align with the holes in the Top Panel of Base (A). Insert the Eccentric Cams (ZG) into the pre-drilled holes in the Left & Right Side Assembly of Base (B, C). Make sure the groove in the Eccentric Cams (ZG) faces out and the arrow points towards the Connecting Bolts (ZF). Use the Phillips Head Screwdriver (ZN) to adjust the Eccentric Cams (ZG) and to lock the inserted Connecting Bolts (ZF) in place by turning in a clockwise direction. Cover the Eccentric Cams (ZG) with Plastic Covers (ZH). See Illustration #2.



1852684

Adderley Armoire-AM

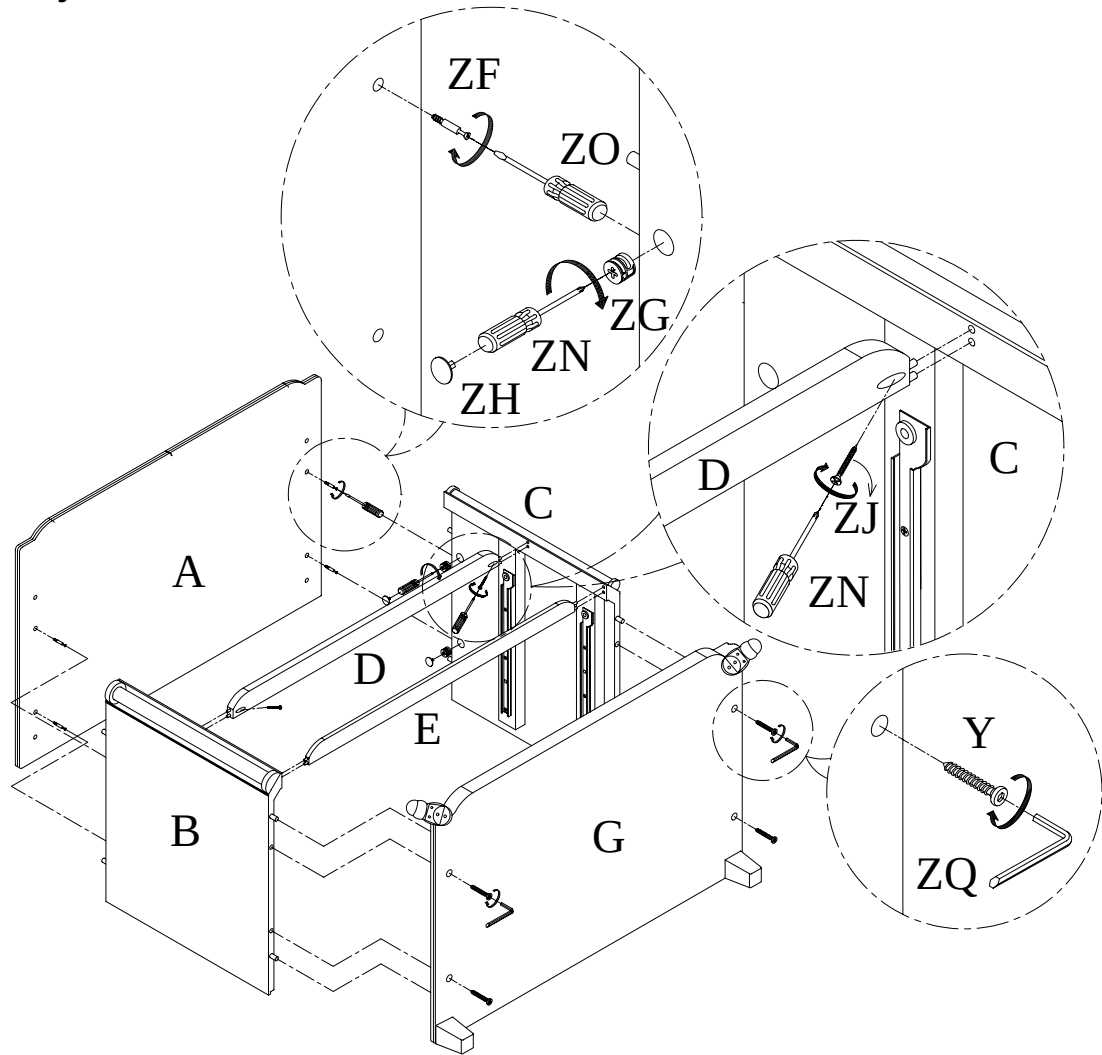


Illustration # 2



1852684

Adderley Armoire-AM

Attach Back Panel of Base and Assemble Drawers

Parts required

A.	Top Panel of Base	1 pc	M.	Back Panels of Drawers	2 pcs
B.	Left Side Assembly of Base	1 pc	N.	Bottom Panels of Drawers	2 pcs
C.	Right Side Assembly of Base	1 pc	X.	Small Handles	2 pcs
F.	Back Panel of Base	1 pc	ZI.	Phillips Head Bolts	4 pcs
G.	Bottom Panel of Base	1 pc	ZK.	Medium Flat Phillips Head Screws	28 pcs
J.	Front Panels of Drawers	2 pcs	ZM.	Pan Phillips Head Screws	14 pcs
K.	Left Side Assembly of Drawers	2 pcs	ZN.	Phillips Head Screwdriver	1 pc
L.	Right Side Assembly of Drawers	2 pcs			

7. **Attach Back Panel of Base (F)** Align the pre-drilled holes in the Back Panel of Base (F) with the pre-drilled holes in the Top Panel of Base (A), Left & Right Side Assembly of Base (B, C) and Bottom Panel of Base (G). Secure with Pan Phillips Head Screws (ZM) using Phillips Head Screwdriver (ZN). See Illustration #3.

8 **Assemble the Drawer** Insert the dowels in Back Panel of Drawer (M) into the pre-drilled holes in the Left & Right Side Assembly of Drawers (K, L). **Note: Grooves of the drawer panels should face inward and meet.** Insert the Bottom Panel of Drawer (N) into the grooves of the Left & Right Side Assembly and Back Panel of Drawer (K, L, M). Insert Medium Flat Phillips Head Screws (ZK) through the holes in the Left & Right Side Assembly, Back Panel of Drawer (K, L, M) into the pre-drilled holes in the Back Panel, Left & Right Side Assembly of Drawers (M, K, L) and secure using the Phillips Head Screwdriver (ZN). Align the pre-drilled holes in the Front Panels of Drawers (J) with the pre-drilled holes in the Left & Right Side Assembly of Drawers (K, L). Secure with Medium Flat Phillips Head Screws (ZK) using the Phillips Head Screwdriver (ZN). Insert the Phillips Head Bolts (ZI) through the pre-drilled holes in the Front Panels of Drawers (J) into the pre-threaded holes of Small Handles (X) and secure using Phillips Head screwdriver (ZN). Insert the drawers into drawer space. See Illustration #3.



1852684

Adderley Armoire-AM

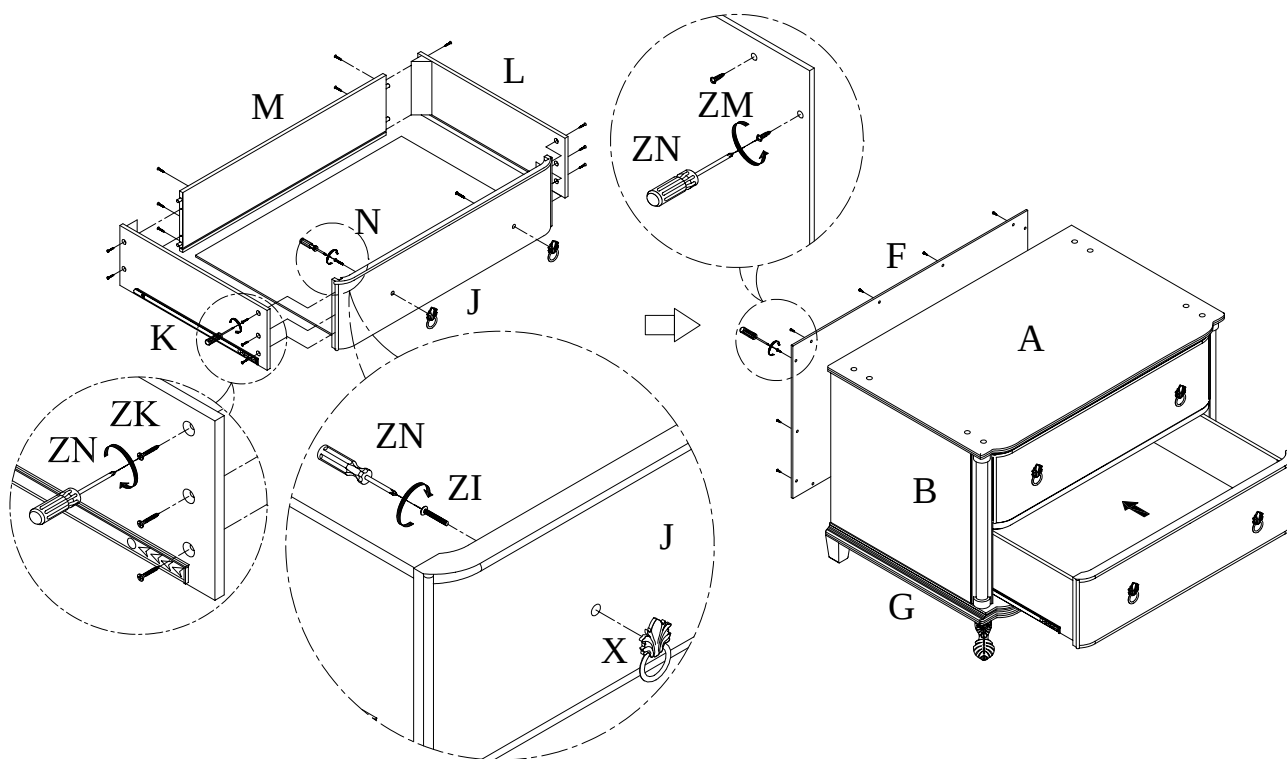


Illustration # 3



1852684

Adderley Armoire-AM

Attach Top Assembly, Left & Right Side Panel, Stationary Shelf of Hutch

Parts required

A.	Top Panel of Base	1 pc	ZD.	Small Flat Washers	8 pcs
O.	Crown of Hutch	1 pc	ZE.	Small Lock Washers	8 pcs
P.	Top Assembly of Hutch	1 pc	ZF.	Connecting Bolts	8 pcs
Q.	Left Side Panel of Hutch	1 pc	ZG.	Eccentric Cams	8 pcs
R.	Right Side Panel of Hutch	1 pc	ZH.	Plastic Covers	8 pcs
S.	Stationary Shelf of Hutch	1 pc	ZN.	Phillips Head Screwdriver	1 pc
T.	Back Panel of Hutch	1 pc	ZO.	Flat Head Screwdriver	1 pc
ZA.	Short Allen Head Bolts	8 pcs	ZQ.	Small Allen Head Wrench	1 pc

9. **Attach Stationary Shelf of Hutch (S)** Align the pre-drilled holes in the cleat rails of Stationary Shelf of Hutch (S) with the pre-drilled holes in the Left & Right Side Panel of Hutch (Q, R). Make sure the dowels of Stationary Shelf of Hutch (S) align with the pre-drilled holes in the Left & Right Side Panel of Hutch (Q, R). Secure with Short Allen Head Bolts (ZA), Small Lock Washers (ZE) and Small Flat Washers (ZD) using Small Allen Head Wrench (ZQ). See Illustration # 4.
10. **Attach Connecting Bolts (ZF)** Align the exposed threads on the Connecting Bolts (ZF) with the pre-threaded holes in the Top Panel of Base (A) tighten by turning in a clockwise direction using the Flat Head Screwdriver (ZO). Repeat this step to attach the Top Assembly of Hutch (P). See Illustration #4
11. **Attach Left & Right Side Panel of Hutch (Q, R)** Refer step 6 to attach Left & Right Side Panel of Hutch (Q, R).
12. **Attach Crown of Hutch (O) & Top Assembly of Hutch (O, P)** Align the pre-drilled holes in the cleat rails of Top Assembly of Hutch (P) with the pre-drilled holes in the Crown of Hutch (O). Secure with Short Allen Head Bolts (ZA), Small Lock Washers (ZE) and Small Flat Washers (ZD) using Small Allen Head Wrench (ZQ). Refer step 6 to attach Top Assembly of Hutch (P). See Illustration #4.



1852684

Adderley Armoire-AM

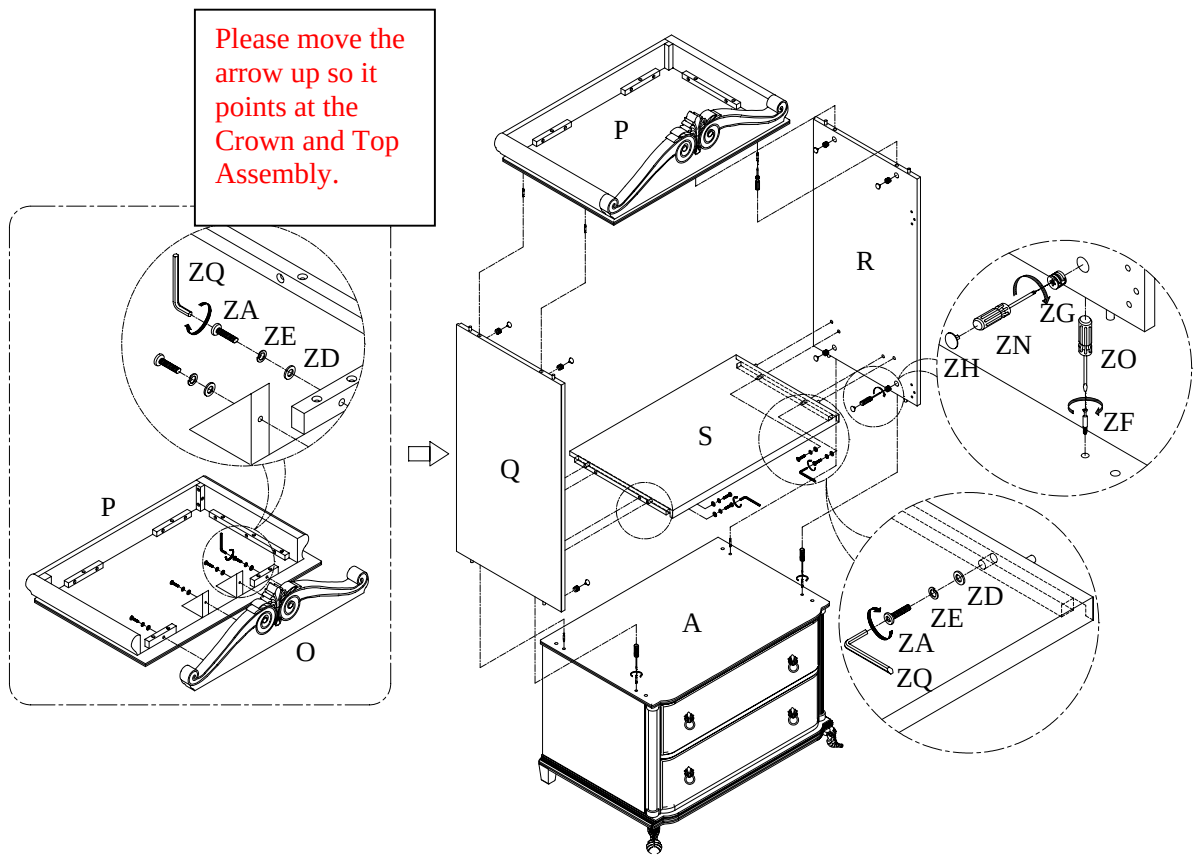


Illustration # 4



1852684

Adderley Armoire-AM

Attach Left & Right Door, Back Panel of Hutch

Parts required

A.	Top Panel of Base	1 pc	U.	Left Door	1 pc
F.	Back Panel of Base	1 pc	V.	Right Door	1 pc
P.	Top Assembly of Hutch	1 pc	W.	Large Handles	2 pcs
Q.	Left Side Panel of Hutch	1 pc	ZI.	Phillips Head Bolts	4 pcs
R.	Right Side Panel of Hutch	1 pc	ZL.	Short Flat Phillips Head Screws	12 pcs
S.	Stationary Shelf of Hutch	1 pc	ZM.	Pan Phillips Head Screws	14 pcs
T.	Back Panel of Hutch	1 pc	ZN.	Phillips Head Screwdriver	1 pc

13. **Attach Back Panel of Hutch (T)** Align the pre-drilled holes in the Back Panel of Hutch (T) with the pre-drilled holes in the Top Panel of Base (A) and Top Assembly, Left & Right Side Panel, Stationary Shelf of Hutch (P, Q, R, S). Be sure that the big hole in Back Panel of Hutch (T) is close to the Back Panel of Base (F). Secure with Pan Phillips Head Screws (ZM) using Phillips Head Screwdriver (ZN). See Illustration #5.
14. **Attach Left & Right Door (U, V)** Align the pre-drilled holes in the hinges of Left & Right Door (U, V) with the pre-threaded holes in the Left & Right Side Panel of Hutch (Q, R). Secure with Short Flat Phillips Head Screws (ZL) using Phillips Head Screwdriver (ZN). See Illustration #5.
15. **Attach Large Handles (W)** Align the pre-threaded holes in the Large Handles (W) with the pre-drilled holes in the Left & Right Door of Hutch (Q, R). Secure with Phillips Head Bolts (ZI) using Phillips Head Screwdriver (ZN). See Illustration #5.

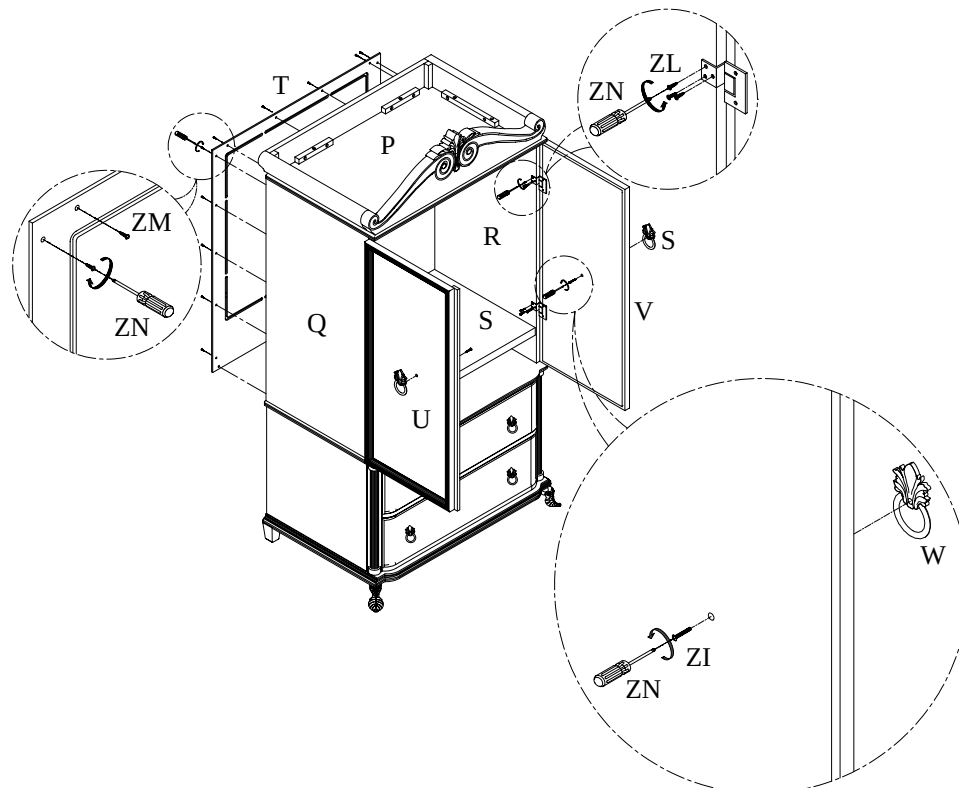


Illustration # 5